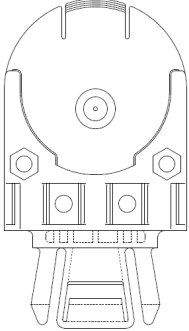
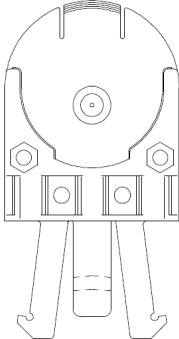
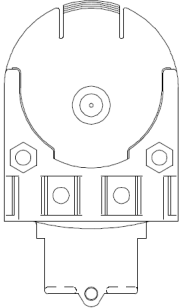


Helmet mount type	Compatible helmets
<p data-bbox="435 296 570 321">SMHA0000</p> 	<ul data-bbox="873 296 1409 743" style="list-style-type: none"> • AOSAFETY BX21, XLR8TM • AMERICAN ALLSAFE Ram2001 Cap, Sentry IIIITM Cap • NORTH SAFETY PRODUCTS Summit series (A99) • BULLARD 3000, 302RT, 4100, 5000, 5100, Vector • JACKSON SC-6, SC-16 • MSA V-Gard, Topgard, Vanguard, Super V Gard II, Linesman • NORTH 410, 420 • NORTON 410 (Australia) • SAFECO Head-Guard • WILLSON Alpha, Betha
<p data-bbox="435 779 570 804">SMHA0001</p> 	<ul data-bbox="873 821 1357 915" style="list-style-type: none"> • PROTECTOR ALSAFE #410, #620 (Australia) • NZ SAFETY • PROSAFE
<p data-bbox="435 1226 570 1251">SMHA0002</p> 	<ul data-bbox="873 1268 1398 1478" style="list-style-type: none"> • CIGWELD Cigweld • LAS LP2016 Saturno • PARAMOUNT Prochoise HH6, HHV6 • PROTECTOR Tuffmaster II (Australia), Tuffmaster III • SAYLENS Magnum

Watch the video on the removal and replacement of helmet mounts on Youtube here:

<https://youtu.be/WIDmeAHYJP0>